

DNECONGS180240 INSTALLATION AND OPERATION GUIDE



ECONOMIZER 101

Economizers are designed to provide “free” air conditioning when outside conditions are appropriate. When the outside air is cool and dry enough, the economizer automatically opens to introduce the cool air to the interior space, thereby eliminating the need to run the air conditioning compressor.

If the outside air becomes too warm or humid, the economizer automatically closes the fresh air damper and the compressor engages to begin cooling the space mechanically.

If a two stage thermostat is used it is possible to use a combination of economizer and mechanical cooling to condition the space.

The economizer can also be set to allow a minimum amount of fresh air to enter the space when the equipment’s indoor blower is operating.

Economizers are valuable tools to enhance indoor air quality, save energy and prolong the life of the air conditioning equipment.

SEQUENCE OF OPERATION

This sequence assumes employment of a single enthalpy economizer using a two stage thermostat.

1. A call for cooling comes from room thermostat.
2. The enthalpy sensor determines if the atmospheric conditions are conducive for using outside air for cooling. If YES, go to step 3. If NO, or if outdoor air temperature rises above enthalpy set point, go to step 4.
3. The outside air dampers open and modulate to maintain a mixed air temperature (outside air + indoor air) of 53 degrees F. If the outdoor air is insufficient to satisfy the thermostat alone and a second stage of cooling is required, the first stage compressor starts and works in conjunction with the economizer

- to cool the space. (Go to step 5.)
4. Outdoor air dampers open to minimum position and the compressor engages to provide mechanical cooling.
5. When the thermostat is satisfied the outside air dampers return to a closed position.

INSTALLATION

1. Open the carton and inspect the contents for shortages and damage.
2. Remove the large evaporator access panel from the package unit and discard. Remove the smaller filter access panel.
3. Slide the damper rack into the large opening until the front flange is against the evaporator support bracket. Tilt the rack back slightly to prevent the front flange from entering the bottom duct opening. (Figure 1&2)

Figure 1



Figure 2

4. Slide the damper rack to the right until the damper side flanges are even with the evaporator access panel opening flange. The top flange of the damper rack should be even with or just inside the top cap of the unit. (Figure 3&4)



Figure 3

CONTENTS

1	Damper rack w/ economizer controls
1	Fresh air hood
2	Mist eliminator
1	Screw package and control jumpers
1	Installation Instructions and Component Manual

Figure 4



5. Remove the mist eliminator filters from the fresh air/barometric relief hood.
6. Install gasket material on the front of the top flange of the hood assembly.
7. Install gasket material on the inside of the side flanges of the hood assembly.
8. Install the hood assembly taking care to slide the top flange of the hood under the top cap of the unit.
9. Secure the hood with the screws provided.
10. Reinstall the mist eliminators and secure them using the latches provided.
11. Locate the unit economizer 9 pin plug inside the evaporator section near the filter access opening and plug it into the corresponding 9 pin plug on the economizer.

NOTE: Ensure neither the wire nor the plugs interfere with the movement of the dampers during operation.

12. Refer to psychrometric chart included with controller check out literature to determine the A, B, C, or D setting for the controller. The factory setting is the D position.
13. Use the minimum set point equation (see below) to determine the minimum position setting on the controller. The factory setting is closed or full CCW.
14. Seal the hood using silicone or other approved method to ensure a water tight seal
15. Replace filter access panel.

MINIMUM SET POINT EQUATION

$$(To \times OA) + (Tr \times RA) = Tm$$

To = Outdoor air temperature

OA= Percent of outdoor air

Tr = Return air temperature

RA= Percent of return air

Tm= Resulting mixed air temperature

Example:

Fresh air required is 10% outdoor air.

Outdoor air temperature is 60 degrees F.

Return air temperature is 75 degrees F.

$$(0.1 \times 60) + (0.9 \times 75) =$$

$$6.0 + 67.5 = 73.5$$

Mixed air temperature will be 73.5 degrees F when the OA is 60 degrees F and the RA is 75 degrees F with 10% outdoor air.

ACCESSORIES / CAPABILITIES

Dual Enthalpy - Requires an additional C7400 enthalpy control installed in the return air duct.

Demand Control Ventilation - Requires a CO2 sensor.

Power Exhaust - DNPE3672 power exhaust used in applications where barometric relief is not sufficient.

Remote Minimum Positioner - For applications requiring minimum position adjustments inside the conditioned space.

Important Notes

If Power Exhaust or Demand Control Ventilation is not utilized ensure that the DCV Max and DCV Set pots are full counterclockwise.


Please see enclosed brochure for Honeywell component trouble shooting instructions.

Controller is factory set for power exhaust to engage when the dampers are 70% open.

The fresh air mist eliminator should be flushed periodically with warm soapy water.

A two stage thermostat is recommended with this accessory.

**GOODMAN GAS PACK WITH
W7212 / LF24-SR ECONOMIZER
PACKAGE**

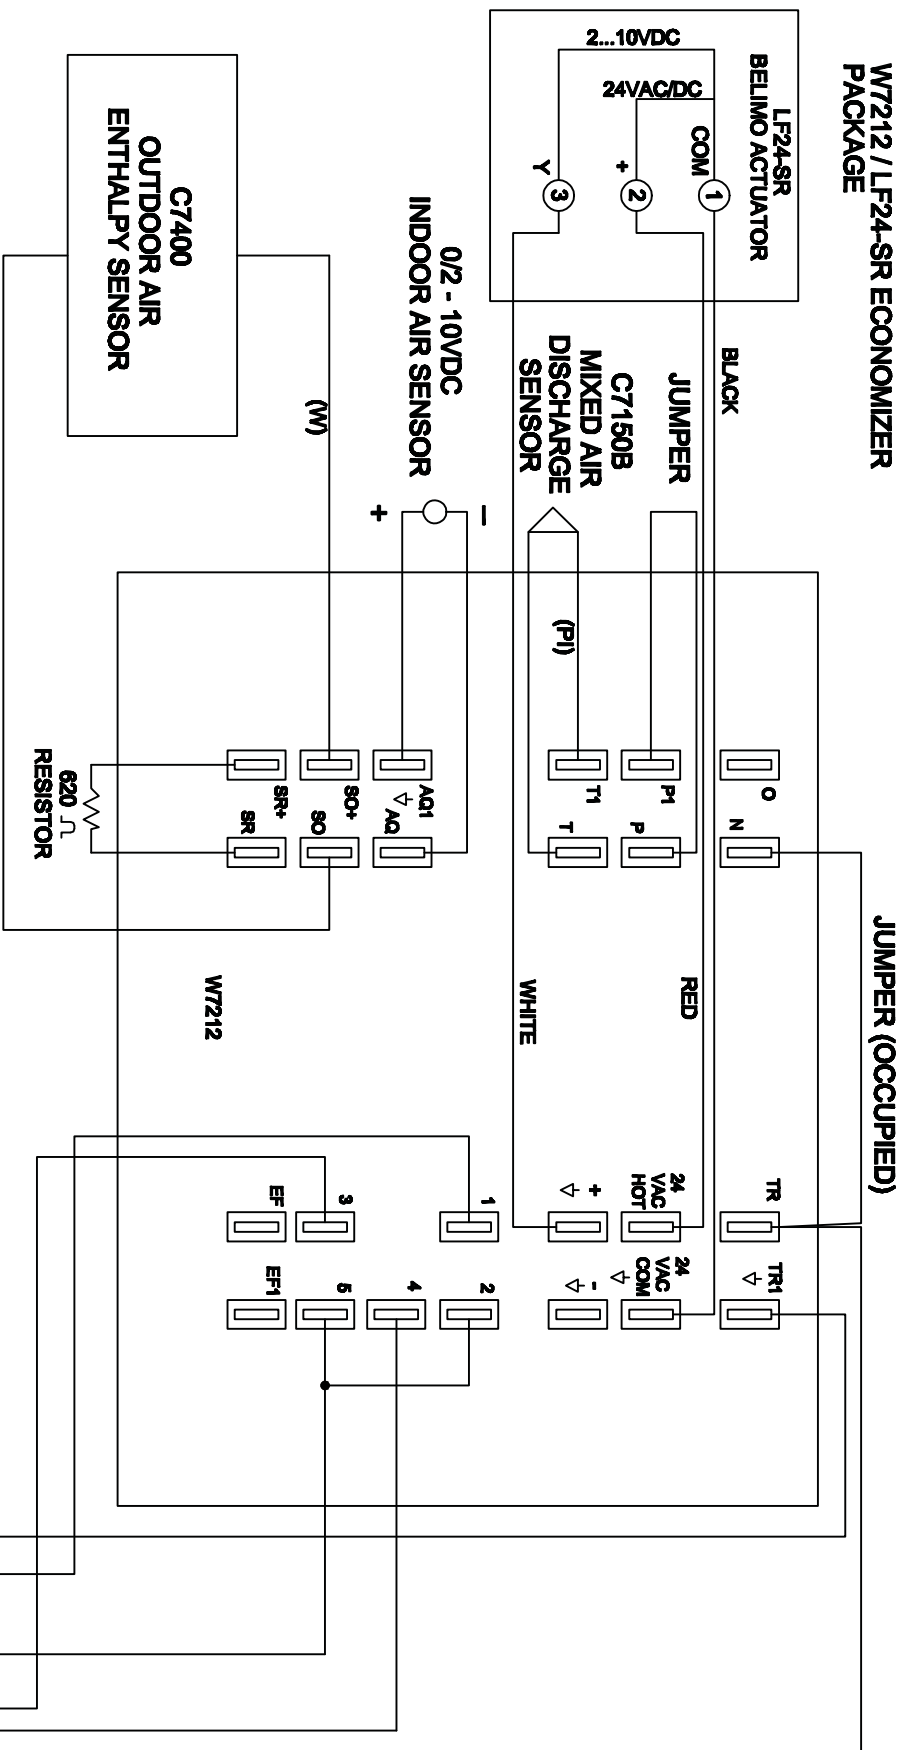

- COLOR CODES**
- ① (N) YELLOW
 - ② (P) PURPLE
 - ③ (P) PURPLE
 - ④ (NYR) YELLOW/RED
 - ⑤ (B) BLUE
 - ⑥ (G) GREEN
 - ⑦ (P) PINK
 - ⑧ (W) WHITE

