

Figure 1

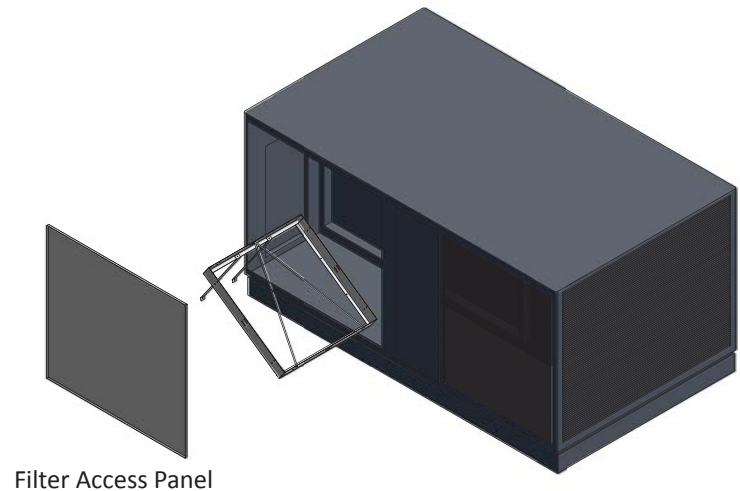


Figure 2

IT IS RECOMMENDED THAT POWER BE DISCONNECTED FROM THE UNIT DURING INSTALLATION OF ACCESSORIES. INSTALLATION OF UNIT COMPONENTS SHOULD BE COMPLETED BY A LICENSED QUALIFIED PERSON. READ THE INSTRUCTIONS THOROUGHLY BEFORE PROCEEDING.

1. Use two of the screws provided in the envelope to attach the air block off plate to the filter frame. (Figure 1)
2. If using a 2" filter, position the bottom legs of the filter retainer rod to the top openings.
3. Remove the filter access panel.
4. Position the filter frame assembly in the return air section of the unit. (Figure 2) Be careful not to damage the unit insulation during installation.
5. Bend the frame support straps down and attach to the bottom return duct flanges.
6. Flex the filter retainer rod to remove it and install a 24 X 24 filter into the rack. Make sure the airflow arrows on the filter are pointing up.
7. Re-install the filter retaining rod.
8. Replace the filter access panel.
9. Restore power to the unit.