




Barometric relief dampers allow exhaust air to be discharged from the space when a downflow economizer is operating.

The 115-LX-11D is used in downflow applications.

Relief dampers must be installed when using an economizer unless other provisions are made to provide exhaust during economizer operation.

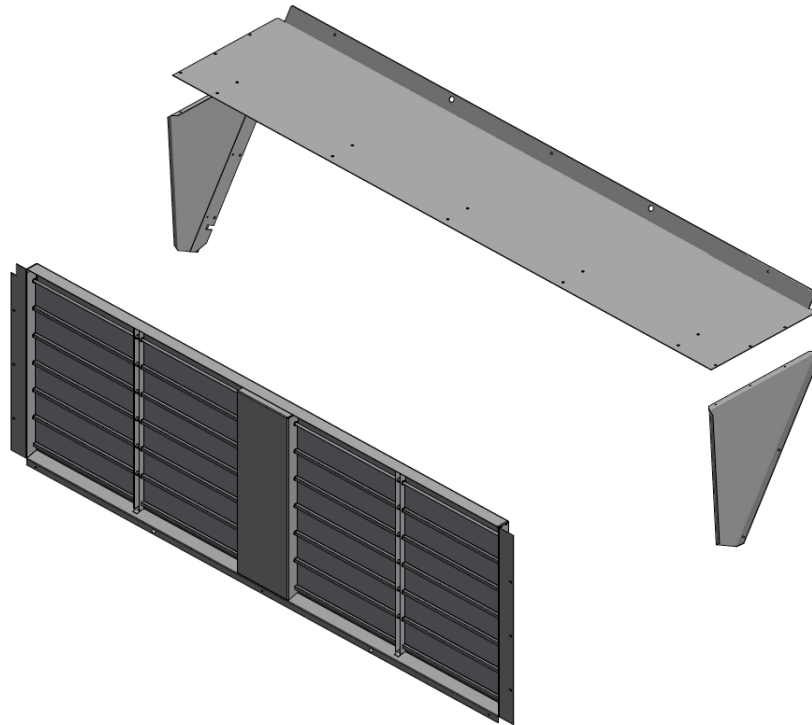

Parts List:

- 1 - Damper Assembly
- 1 - Hardware bag
- 1 - Foam gasket
- 1 - Hood heel
- 2 - Hood sides

Installation

1. Disconnect power to the unit.
2. Apply the foam gasket to the back side of the damper flanges.
3. Align the holes along the edge of the damper with the bottom of the unit.
4. Secure the assembly to the duct using the screws provided.
5. Restore power to the unit.