




Barometric relief dampers allow exhaust air to be discharged from the space when a horizontal economizer is operating.

The 115-LX-11H is installed in the return duct upstream of the horizontal economizer.

Relief dampers must be installed when using an economizer unless other provisions are made to provide exhaust during economizer operation.

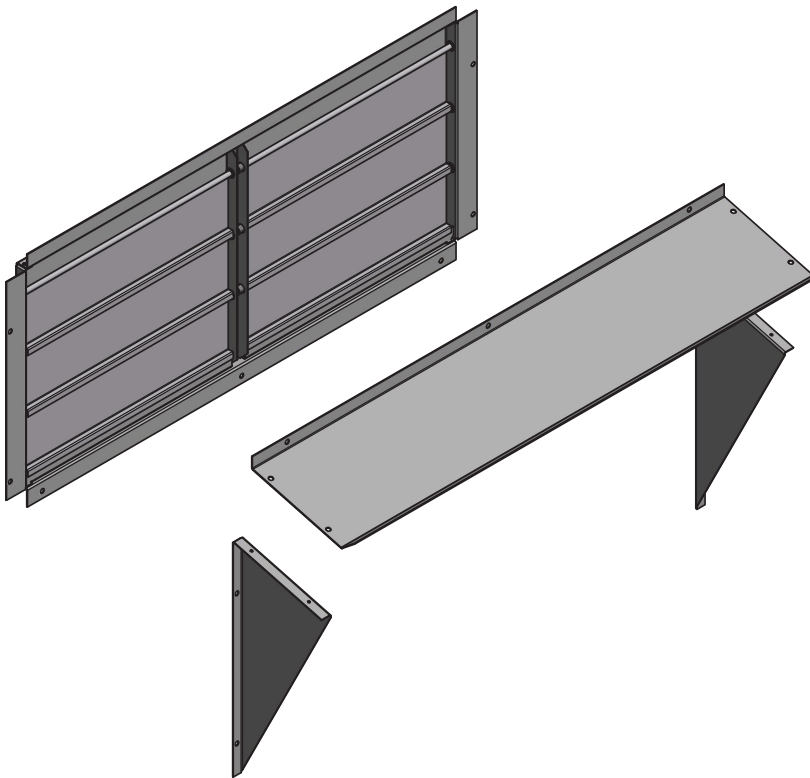

### Parts List:

- 2 - Damper Assemblies
- 2 - Hood Assemblies
- 1 - Hardware bag
- 1 - Foam gasket

### Installation

1. Disconnect power to the unit.
2. Apply the foam gasket to the back side of the damper flanges.
3. Assemble the hoods per the drawing above using the screws provided.
4. Cut two 29 1/2" wide by 13" tall openings in the return duct upstream of the economizer, centered vertically on the duct. The openings may be on either side of the return duct or next to on another. Be sure to allow 4" between side by side openings to allow hood installation.
5. Align the holes on the top of the hood with the holes on the top of the damper and slide the assembly into the openings from step 4.
6. Secure the assembly to the duct using the screws provided.
7. Restore power to the unit.