




The 110-RX-009GG is a 0-35% motorized outside air damper designed to replace the horizontal return cover with no drilling or field assembly required. A two position damper opens when the blower is energized and the amount of outside air is controlled by adjusting the position of the slide dampers.

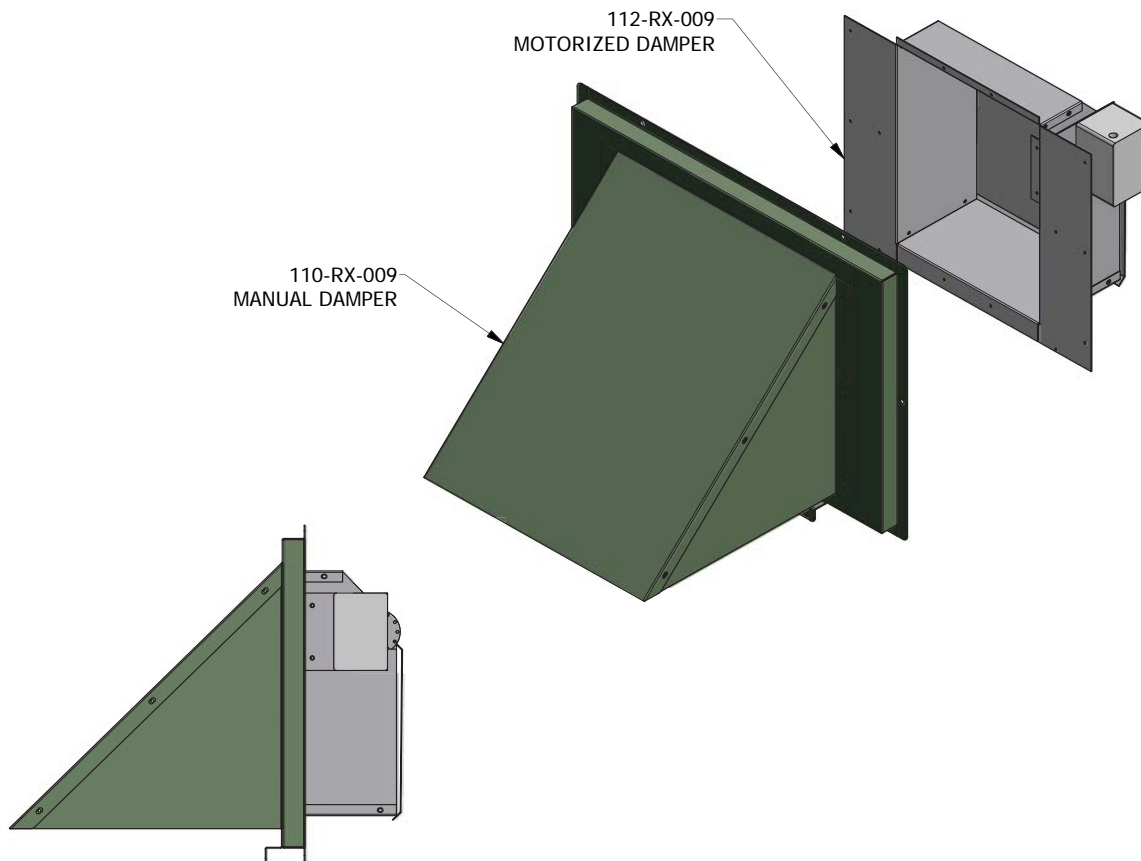

Installation

1. Disconnect the power from the rooftop unit.
2. Inspect the hood for damage and missing parts.
3. Remove the horizontal duct opening cover and retain the screws.
4. Secure the damper over the horizontal opening using the screws and existing holes in the unit.
5. Adjust the slide dampers to the desired position.
6. Cut and strip the green and brown wire from the female economizer plug in the rooftop unit.
7. Connect the green from the damper to the gray wire in the unit and the white wire from the damper to the brown.

NOTE: The hood will need to be removed to adjust the top slide damper. The top damper must be removed to allow for maximum fresh air